PS 2554

Acrylic Handle
Include button, insert, screw and allen wrench

Manettes en acrylique
Comprend bouton, garniture, vis et clé hexagonale

Tub and Shower

Douche et baignoire

UNIVERSAL / *UNIVERSEL*

PlumbShop®

Paperboard made from 85% recycled fibres.
Carton fabriqué avec 85% de fibres recyclées.

HANDLE INSTALLATION

1. Remove old handle.
2. Place insert onto stem.
3. Center insert by tightening all three screws with allen wrench.
4. Remove screw cover from handle and place over stem, fitting recess in handle over stem.
5. Secure handle to stem with retaining screw.
6. Replace screw cover.

INSTALLATION DE MANETTE

1. Enlevez la vieille manette.
2. Placez la garniture sur la tige.
3. Centrez cette garniture en serrant les trois vis avec une clé hexagonale.
4. Enlevez la couvercle à vis de la manette et placez-la par-dessus la tige, en ajustant le retrait dans la manette par-dessus la garniture.
5. Attachez la manette à tige au moyen de la vis de retenue.
6. Remettez le couvercle à vis en place.

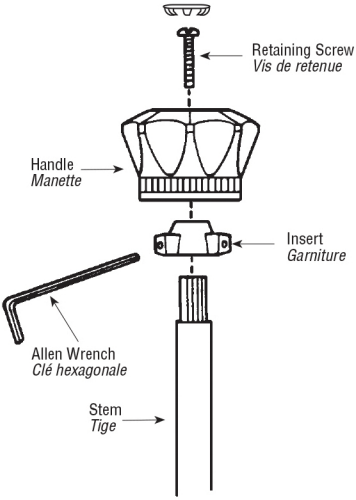

Trouble Shooting
For easy removal of faucet tub or shower handles use a PS 2437 Faucet Handle Puller.
Guide de dépannage
Pour faciliter l'enlèvement des manettes de robinet, baignoire ou douche utilisez un Arrache-poignée de robinet.

PS 2554 - 63 4485 2
IMPORTED BY / *IMPORTÉ PAR*
BRASSCRAFT CANADA LTD.
ST. THOMAS, ONTARIO N5P 3R2
Printed in Taiwan | *Imprimé au Taïwan*

7 78380 02386 4